



## FLEETWOOD WINDOWS & DOORS

## INSTALLATION/ASSEMBLY SERIES 530-T

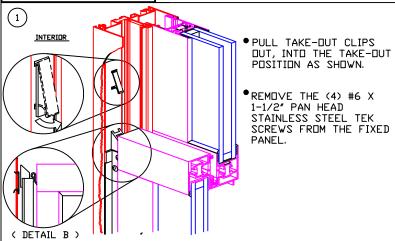






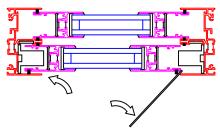



- SLIDE PANEL AS FAR AS POSSIBLE INTO ONE OF THE JAMBS AND SWING OPPOSITE SIDE OUT OF JAMB.
- •IN REMOVING PANEL, IT MAY BE NECESSARY TO WEDGE A FLAT BLADE PUTTY OR UTILITY TOOL BETWEEN PANEL AND JAMB AND APPLY PRESSURE IN ORDER TO "POP" PANEL OUT OF JAMB.

## EXTERIOR

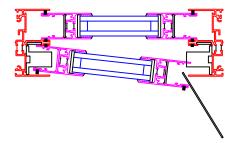

 
• THE PANEL MAY NOW BE REMOVED COMPLETELY. EXTERIOR




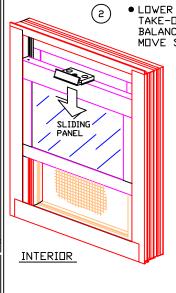

● LOWER THE SLIDING PANEL ABOVE TAKE-OUT CLIPS TO DISENGAGE THE BALANCE, THE PANEL IS NOW FREE TO MOVE SIDE TO SIDE WITHIN THE JAMBS.

SLIDE THE FIXED PANEL DOWN AND PUSH AGAINST ONE OF THE PANELS AND SWING OPPOSITE SIDE OUT OF JAMB.

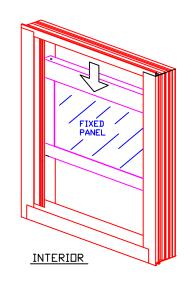

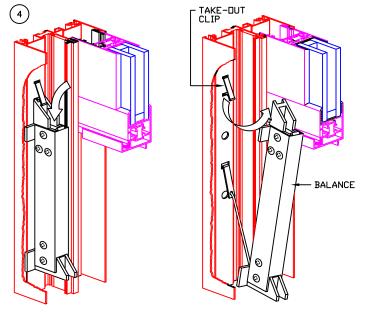

• DNCE SLIDING PANEL IS REMOVED, BALANCES MAY BE TAKEN DUT BY PUSHING THEM DOWN AND PULLING THEM DUT FROM UNDER TAKE-DUT CLIPS, AS SHOWN.