




FLEETWOOD WINDOWS & DOORS

XO PANEL INSTALLATION SERIES 250


- INSERT ANTI-LIFT BLOCK WITH A DAB OF CAULKING OVER SLIDING PANEL 2" FROM INTERLOCKERS. SEE (FIG 2-1)
- FROM THE INSIDE, INSTALL 2 #6X1/2" TEK SCREWS INTO THE PREDRILLED HOLE, THROUGH THE WEATHER-STRIP POCKET INTO THE FIXED PANEL STILE. SEE (FIG 2-2)
- ATTACH THE AIR BARRIER TO THE TOP OF THE FIXED INTERLOCKER WITH A #6X1/2" TEK SCREW AFTER THE FIXED PANEL HAS BEEN INSTALLED INTO FRAME. SEE (FIG 2-3)
- AN OPTIONAL HEAD BUMPER MAY BE INSTALLED INTO THE HEAD OF THE SLIDING TRACK NEXT TO THE JAMB TO PREVENT FINGER PINCHING. ATTACH THE HEAD BUMPER WITH (2) #8 X 2" COUNTERSUNK HEAD TEK SCREWS. SEE (FIG 2-4)

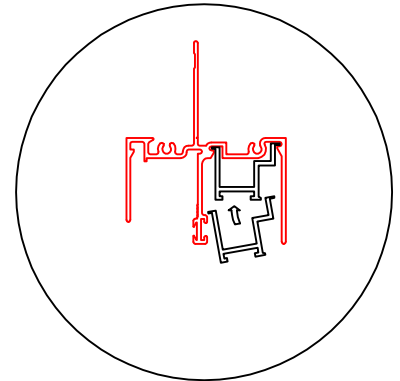



(FIG 2-1)

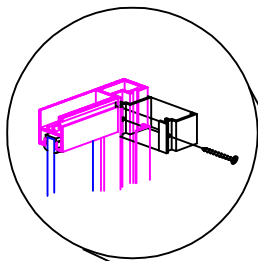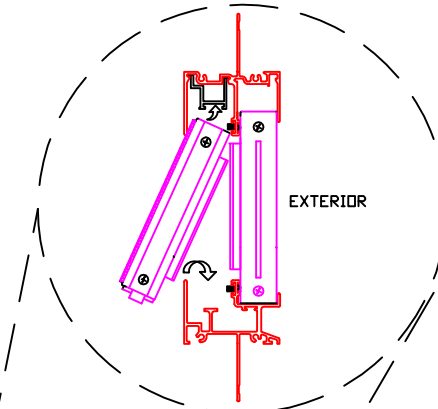

(FIG 2-3)

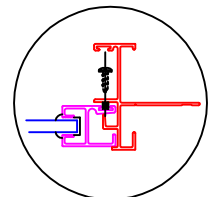

(FIG 2-2)

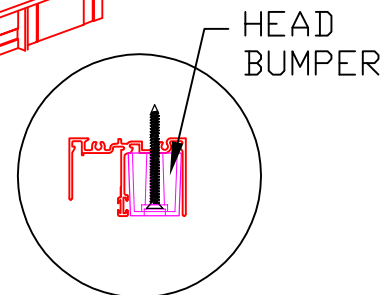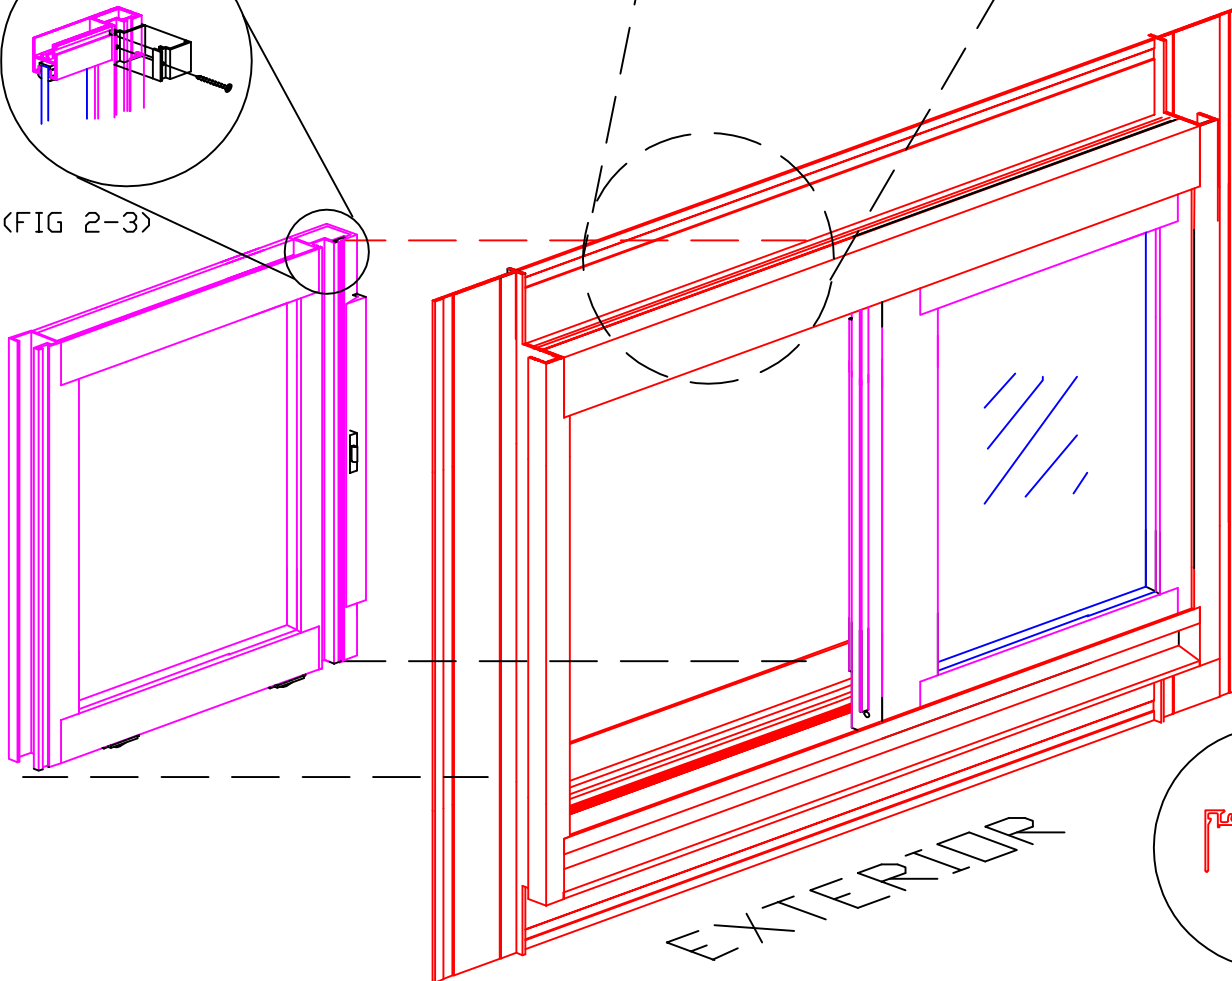

(FIG 2-4)