

Table of Contents

I. Care and Maintenance	2
II. Tools / Materials, Sealant Requirements, & Load / Anchor Instructions.....	2
III. Assembly and Installation	2
IV. Structure Verification & Sillpan Installation	3
1. Opening Verification	3
2. Pre-Fit and Leveling	3
3. Flash the Opening	3
4. Sillpan Installation	4
V. Window Installation	4
1. Nail-fin Frames	4
2. Block Frames	5
3. Wall Conditions	5
VI. Glazing Instructions.....	8
Dry Glazing Procedure	8
Alternate Glazing Procedure	8
VII. Corner Window Installation.....	9
1. Corner Butt Glazing.....	9
VIII. Flashing after Installation.....	11
Appendix A: Joining Sillpans	12

I. Care and Maintenance

Operational Warning: Fleetwood products operate smoothly and special care should be taken by the owner to make sure users are not injured.

This product is factory finished. Please handle with extreme care. Protect all exposed surfaces from contact with caustics, corrosives, solvents, abrasions, impacts, wet packing material etc.

FAILURE TO DO SO WILL NULLIFY THE WARRANTY. Before **ANY CLEANING**, review the Care & Maintenance Instructions (go to www.fleetwoodusa.com for more information). **Contact the local dealer with any questions or concerns.** Fleetwood strongly recommends that all products be cleaned after installation and totally protected from construction debris and equipment.

II. Tools / Materials, Sealant Requirements, & Load / Anchor Instructions

Tools Required: Tape measure, level, shims, nails, hammer, putty knife, screws, Sealant, caulk gun, backer Rod, 6mm hex wrench, scissors or utility knife, drill bit, drive bit and powered drill.

Sealant Requirements

- The sealant referred to within this document for seals associated with the assembly of the product should conform to **AAMA 800**. It may be a sealant recommended and approved by the sealant manufacturer that is compatible with the framing, finish and surrounding materials.
- All sealant bead sizes must conform to the sealant manufacturers' size requirements.
- The Owner / General Contractor is responsible for identifying the need for any additional sealant to be applied by others. Such sealant shall be elastomeric material, with the framing, finish and surrounding materials.

Load / Anchor Instructions

- Live or Dead Loads can affect product functionality, loads shall be designed to withstand the most critical effects of load factors and load combinations as required by building code.
- Fleetwood requires maximum vertical deflection of the header not to exceed $\text{Span}/720$ or $1/8"$
- Structural engineer to determine anchor quantity and spacing for design load requirements.
- Proper isolating material must be between dissimilar surfaces (i.e. block/concrete & aluminum).

III. Assembly and Installation

General: The key to any window or door installation is preparation. This extends from storage of the product to the final installation and to all points in between. Careful planning and attention to detail can help ensure proper installation.

It is essential that each Fleetwood product be assembled and glazed in accordance with AAMA standards and factory instructions. It is the installer's responsibility to ensure that each Fleetwood product is assembled, glazed and installed and completely sealed to ensure that the product is leak-free and operates correctly. **Installation of Fleetwood products must be in accordance with the standards set forth in ASTM E 2112.** If there are any questions regarding the installation of a Fleetwood product contact the factory customer service department.

Fleetwood has provided this product with recommended field glazed weather-stripping. If the provided weather-stripping does not ensure an optimum fit of glass to frame the Fleetwood Authorized Dealer should contact Customer Service for an expedited **NO CHARGE** shipment of replacement weather-stripping.

IV. Structure Verification & Sillpan Installation

Note: Sillpan Substitution- If the factory provided pan is not desired, the product warranty will remain intact if the substitute panning system emulates the essential design of the factory pan.

1. Opening Verification

- Check the measurements of the opening and verify that the product will fit into the opening with a clearance of 1/2" in width and 1/2" in height.
- Remove the product(s) from the packaging and lay it in front of the opening. Check width and height dimensions.
- Verify the opening is plumb and level (Figure 1).

2. Pre-Fit and Leveling

- Place sillpan into the opening and determine any leveling that must be done prior to installation
- Shim as necessary to stabilize the entire depth and length of the pan. No unsupported width of more than 8" is allowed. Shim to be load bearing, non-porous, non-absorbent and inorganic.
- If more than 1/8" shim height is required, it is recommended that pouring self-leveling "Rock Hard" (or equal) to achieve level and stable surface.

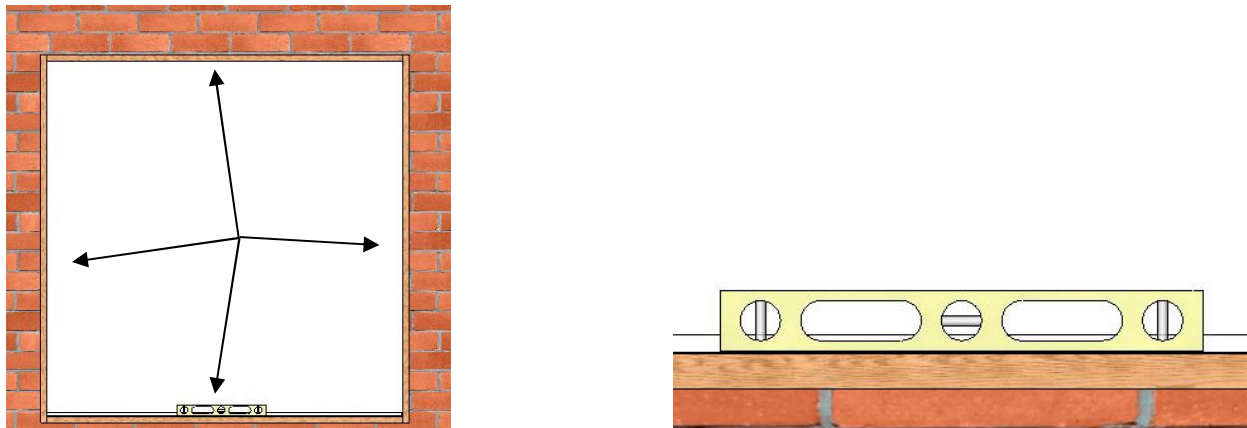


Figure 1:

Use level to determine if the opening is plumb and level

3. Flash the Opening

- Once the opening has been confirmed, flashing of the opening is required prior to Frame installation. Paper and/or liquid flashing methods are acceptable (see AAMA 711/714 for material requirements).
- Check local Building codes for any additional flashing requirements.

Paper Flashing

- At each Jamb the flashing paper should be cut at least 3" past the weep-screed or diado flashing and at least 6" above the head of the door. The flashing must wrap around the jamb and at least 3" back into the opening.
- At the Head run the flashing paper long enough to extend at least 3" past the jamb flashing and wrap around the Header at least 3" into the opening.

Liquid Flashing

- Follow the liquid flashing manufacturer instructions.

4. Sillpan Installation

Note: For splicing and multiple piece Sillpans – (See Appendix A)

- Apply bituminous paint to raw masonry or concrete at the sill to eliminate electrolytic and chemical reactions. We recommend a PVC liner be placed to ensure separation of the metal frame with the substrate. In balcony situations flash the sill with aluminum or galvanized brake metal (Sillpan is provided).
- Apply sealant in all corners and seams of the sillpan (Figure 2).
- With bottom side of sillpan up, apply a 3/8" bead of compatible sealant 1/2" in from interior leg. Sealant bead to run across the bottom as well as up each vertical leg of the sillpan. Also apply sealant beads near the sides and across the front (Figure 3).
- Secure the sillpan to the floor with sealant. Position sillpan as necessary to allow for proper installation of frame assembly (Figure 4).

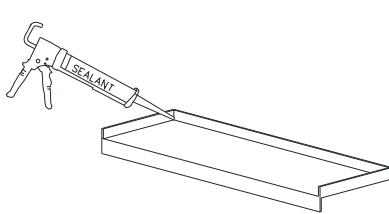


Figure 2:
Seal corners and seams

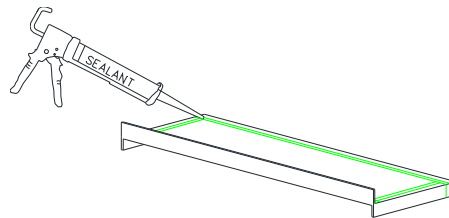


Figure 3:
Seal underside of Sill-pan

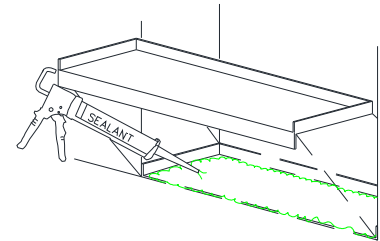


Figure 4:
Set pan in full bed of sealant

V. Window Installation

Note: All windows come pre-assembled and glazed unless specified otherwise. For Awnings and Hoppers where a limit device is requested, reference the *Series 350-T & 450-T Limit Devices Installation Instructions*. Where a butt hinge is present additional anchoring is required (Figure 7).

1. Nail-fin Frames

- Prepare the opening to accept the frame ensuring that the weep-screed flashing at the sill is adjusted to maintain a weatherboard style flashing.
- Flashing paper must be applied with galvanized nails or corrosion resistant staples. Flashing paper shall be applied in a weatherboard fashion around the full perimeter of the framed opening.
- Seal frame and vent joints completely with compatible sealant. Apply a heavy bead of sealant to the interior side of the mounting flange (nail-on) where the frame jamb and sill join. Sealant must cover the entire joint (from the flange to the inside leg) and extend 1 1/2" up the jamb and along the sill (Figure 5).

Note: Inside glazed products-see Additional Glazing procedure, page 8.

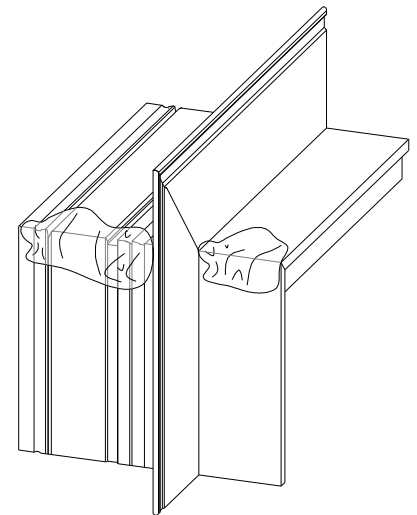


Figure 5:
Nail-fin sealant location

- Apply a continuous bead of sealant along the back and side legs between the sill and sillpan (Figure 7, page 6). Do not apply sealant along the front of the sill, this will prevent proper weepage.
- Insert the frame into the opening, confirm the weep holes are to the exterior and at the sill.
- Cross-measure and adjust using non-porous, non-absorbent, inorganic shims to achieve a plumb square and level condition, as well as an even reveal around the framed opening. Ensure shims are in a location to support any loads that are transferred from the anchor to the frame. Seal all fastener heads with compatible sealant. Only drill holes through Sill as required for design load. In these cases, the installer is responsible to seal these breaches.

Note: Frame installation anchors furnished by installer, not by Fleetwood. Stainless steel screws are recommended.

2. Block Frames

- Prepare the opening to accept the frame ensuring that the weep-screed flashing at the sill is adjusted to maintain a weatherboard style flashing.
- Seal frame and vent joints completely with compatible sealant. Apply a heavy bead of sealant to the interior side where the frame jamb and sill join. Sealant must cover the entire joint (from the flange to the inside leg) and extend 1 1/2" up the jamb and along the sill (Figure 6).
- Apply a continuous bead of sealant along the back and side legs between the sill and sillpan (Figure 8, page 7). Do not apply sealant along the front of the sill, this will prevent proper weepage.
- Insert the frame into the opening, confirm the weep holes are to the exterior and at the sill.
- Cross-measure and adjust using non-porous, non-absorbent, inorganic shims to achieve a plumb square and level condition, as well as an even reveal around the framed opening. Ensure shims are in a location to support any loads that are transferred from the anchor to the frame. Seal all fastener heads with compatible sealant. Only drill holes through Sill as required for design load. In these cases, the installer is responsible to seal these breaches.

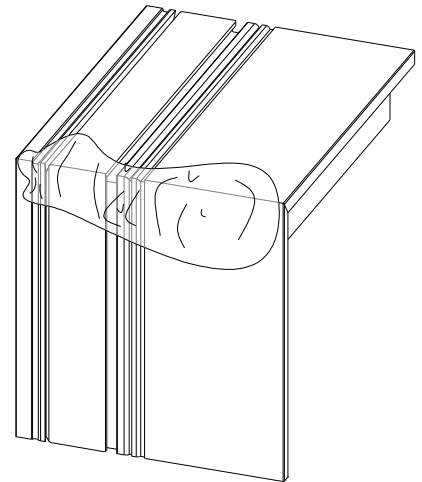





Figure 6:
Block frame sealant location

Note: Installer responsible to ensure anchors maintain edge distance. For fixed panels, remove glass stops to install anchor screws.

3. Wall Conditions

- Nail-fin frame window wall conditions are illustrated on page 6 Figure 7. Please note that shim spacing is different from that of a block frame window as illustrated on page 7 Figure 8.
- For additional wall conditions please follow the link below:

[Series 450-T Wall Conditions](#)

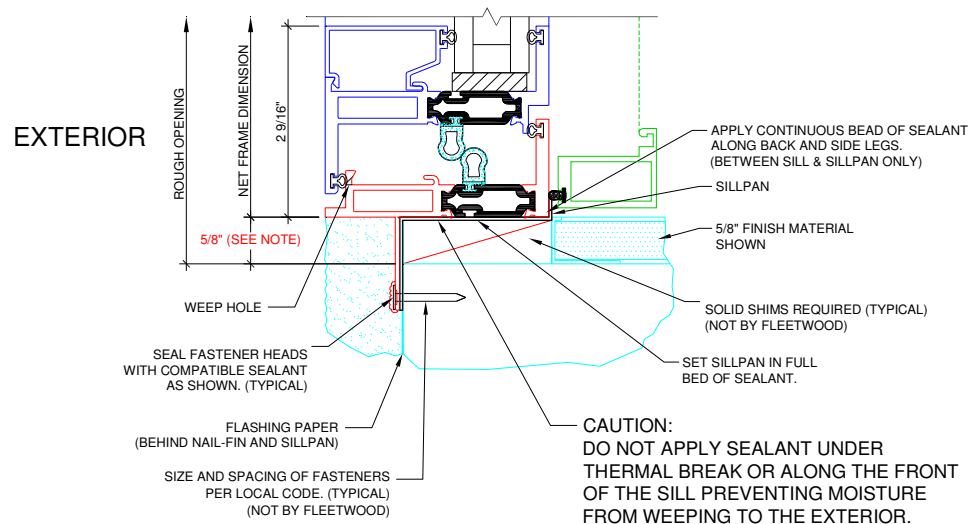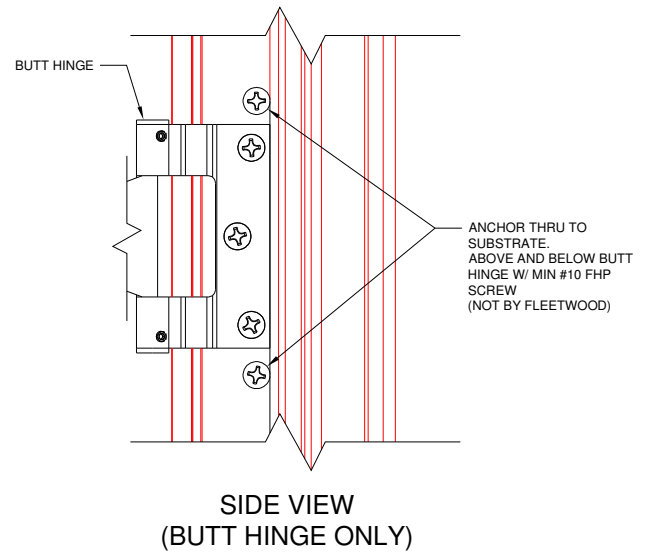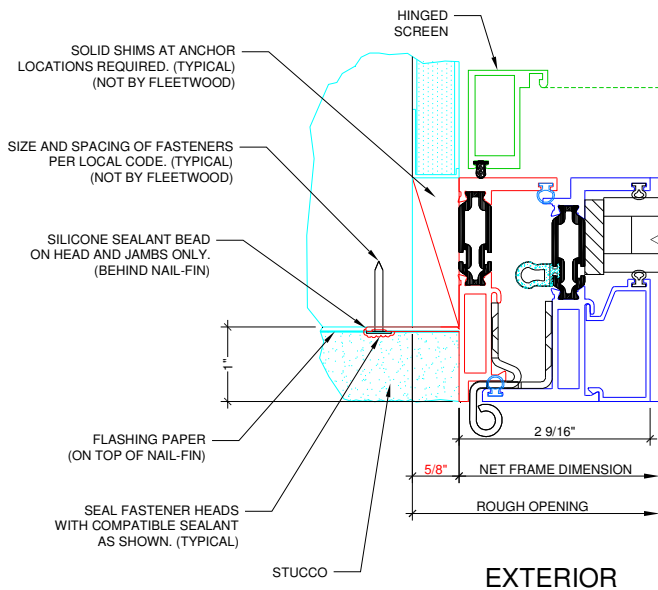


NOTE: SHIM SPACE MAY VARY TO ACCOMMODATE FRAME OPTIONS AND INTERIOR FINISH MATERIAL.

SILL DISCLAIMER: IT IS THE MANUFACTURERS DESIRE FOR THE INSTALLER TO **NOT** PIERCE THE SILL. IN SOME CASES THE CODE OR SPECIFICATIONS REQUIRE SUCH. IN THESE CASES THE INSTALLER IS RESPONSIBLE TO SEAL THESE BREACHES.

Figure 7:
Nail-Fin Window Installation
(Casement Shown)

SERIES 450-T INSTALLATION INSTRUCTIONS

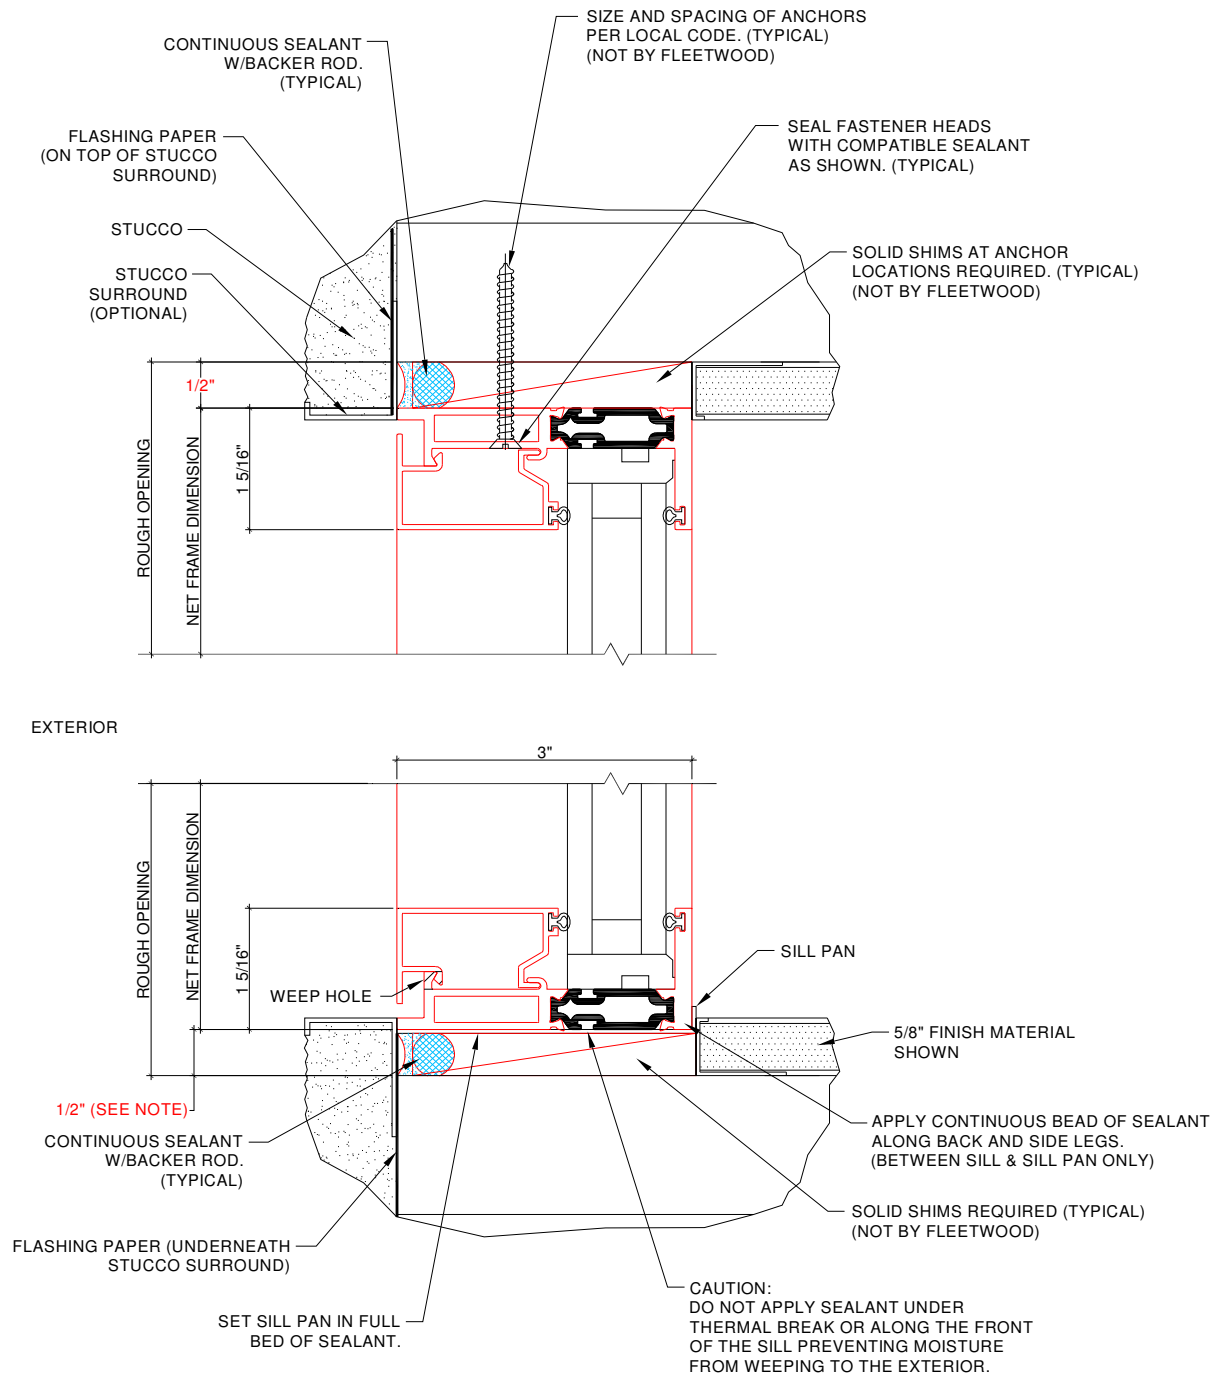

NOTE: SHIM SPACE MAY VARY TO ACCOMMODATE FRAME OPTIONS AND INTERIOR FINISH MATERIAL.
SILL DISCLAIMER: IT IS THE MANUFACTURERS DESIRE FOR THE INSTALLER TO **NOT** PIERCE THE SILL. IN SOME CASES THE CODE OR SPECIFICATIONS REQUIRE SUCH. IN THESE CASES THE INSTALLER IS RESPONSIBLE TO SEAL THESE BREACHES.

Figure 8:
Block Frame Window Installation
(Fixed Frame Shown)

VI. Glazing Instructions

Note: Glass stops must be removed before continuing.

Dry Glazing Procedure

- Apply a 1/4"×1/4"×4" bead of compatible sealant from each corner on inner flange of panel (Figure 9 & 10).
- Install glass setting blocks, stagger setting blocks accordingly to support glass lites.

Awning & Fixed: 1/4 points along the top, bottom, and sides of the frame.

Casement: 1/4 points on the hinge side lower corner (bottom and side) and 1/4 points of the diagonal (top and side) to prevent "sash sag" (Figure 11).

- Install glass to rest on the inner flange of panel then install glass stops (Figure 11).

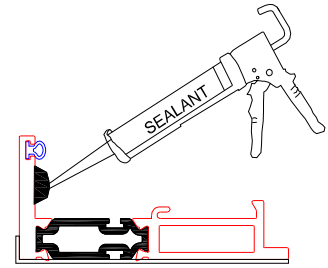


Figure 9:
Sealant Size

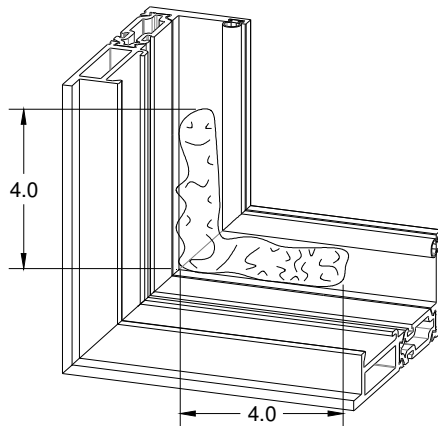


Figure 10:
Sealant Location and Sizes
(Fixed Window Shown)

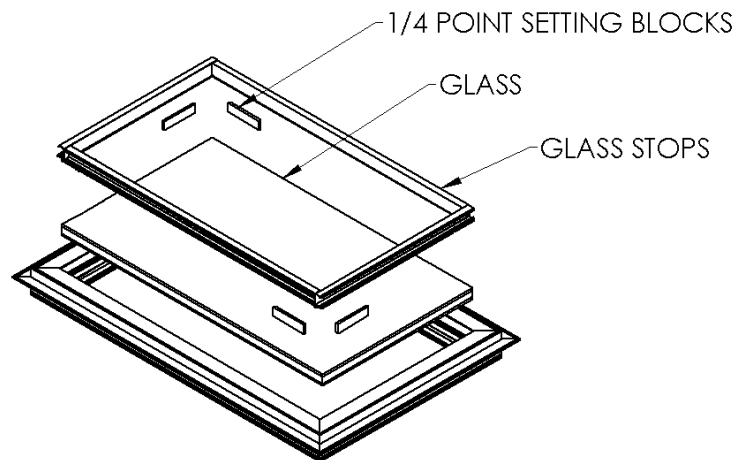


Figure 11:
Glass Installation
(Casement Hinge Side Left Shown)

Alternate Glazing Procedure

Note: Applies to products where additional water protection is required.

1. Before glazing, apply a continuous bead of sealant to the inner frame (Figure 9).
2. After glazing, apply a continuous bead of sealant to the frame and glass (Figure 13).

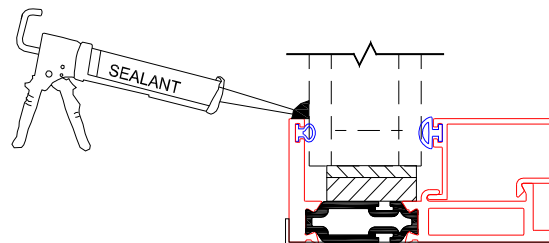


Figure 13:
After Glazing Locations


VII. Corner Window Installation

1. Corner Butt Glazing


Note: Corner windows will be butt glazed on site.

- Install window frame per instruction in Section V.
- Align corner glass panels in frame leaving a 1/4" gap between glass for sealant (Figure 14).
- Orientation and sealant requirement options shown in Figures 15-17.
- Install glass stops following dry glazing procedure in Section VI.

Step #1

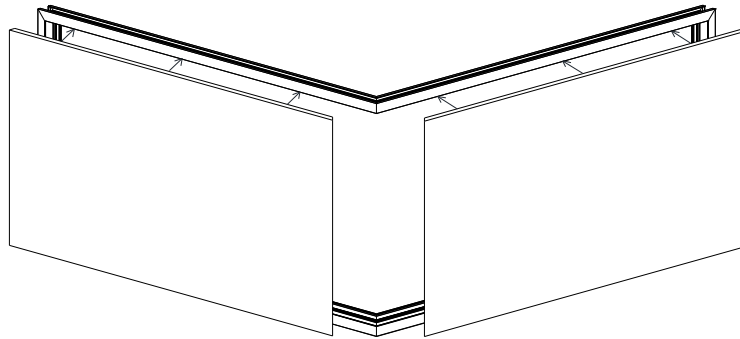

Step #2

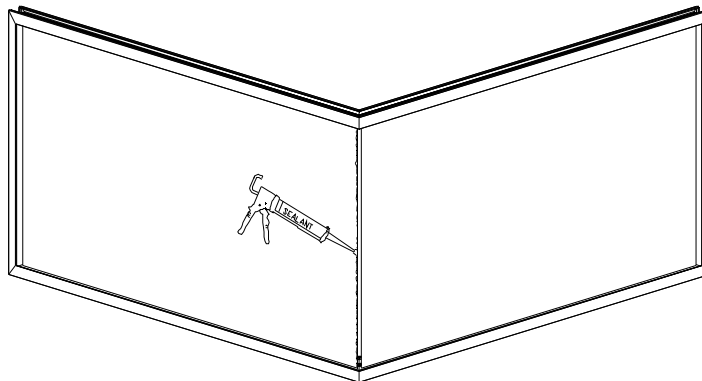

Step #3


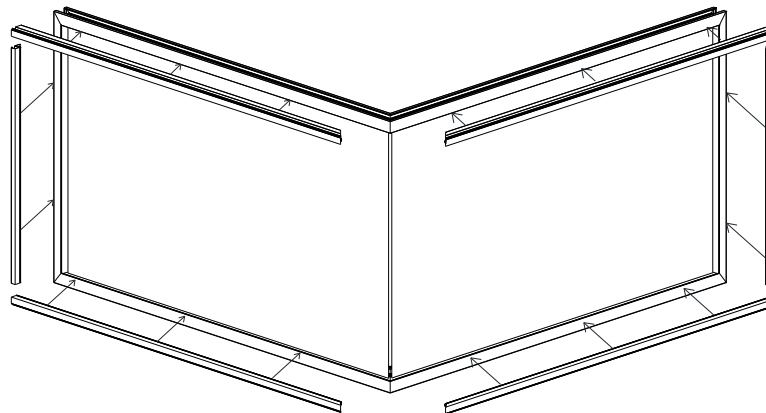



Figure 14:
Corner Butt Glazing

MITERED


MITERED GLASS EDGES NOT ALLOWED
ON SOFT COAT LOW-E GLASS; HOWEVER,
IT IS AVAILABLE ON HARD COAT LOW-E GLASS.

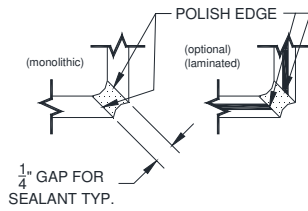


① CORNER SINGLE GLAZED (90° STANDARD)
CUSTOM ANGLES REQUIRE
DRAWING FROM DEALER

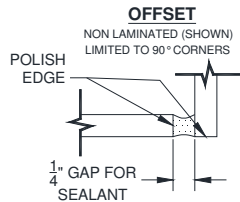

② 90° CORNER SINGLE GLAZED
LEFT HANDED

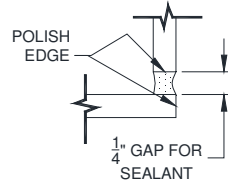


③ 90° CORNER SINGLE GLAZED
RIGHT HANDED

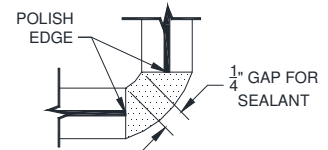


④ LAMINATED (EQUAL OFFSET)
(90° STANDARD)
CUSTOM ANGLES REQUIRE
DRAWING FROM DEALER

Figure 15:
Monolithic Glass Butt Glazing Options


MITERED

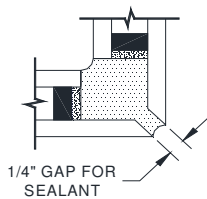


① MITERED CORNER (90° STANDARD)
CUSTOM ANGLE REQUIRE
DRAWING FROM DEALER

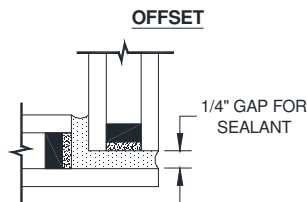

② 90° CORNER LEFT HANDED

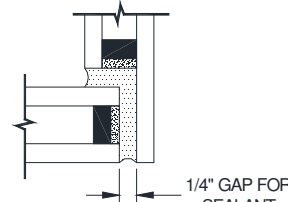

③ 90° CORNER RIGHT HANDED

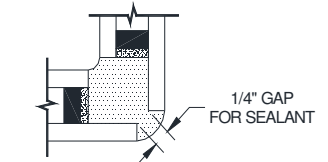

④ EQUAL CORNER OFFSET (90° STANDARD)
CUSTOM ANGLES REQUIRE
DRAWING FROM DEALER

Figure 16:
Insulated Glass Butt Glazing Options
(Dual Glaze Shown)

Note: Sealant not provided by Fleetwood.

VIII. Flashing after Installation

The flashing paper referred to in this document is Moistop or other code compliant flashing material that conforms to **Federal Specification UU-B-790a, Type 1, Grade A, Style 4**. The strips of flashing paper are to be no less than 9 inches wide (or wider as required by local codes). Flashing paper must be applied with galvanized nails or corrosion resistant staples. Flashing paper shall be applied in a weatherboard fashion around the full perimeter of the framed opening.

Important Note: The flashing paper referred to in this document is Moistop or other code compliant flashing material that conforms to Federal Specification UU-B-790a, Type 1, Grade A, Style 4. The strips of flashing paper are to be no less than 9 inches wide (or wider as required by local codes).

1. Once satisfied that the frame is watertight, and immediately prior to application of the flashing paper at the head and jambs, apply a continuous bead of sealant to the exposed mounting flange (nail-fin) at the top (head) and sides (jambs) of the installed frame. Also, apply sealant at corners of the frame and the full length of the seams where the nail fin flashing is mounted.
2. At each jamb, embed the flashing paper into the sealant onto mounting flange and fasten into place. The flashing paper should be cut sufficiently long enough to extend at least 3 in. past the weep-screed flashing and at least 6 inches above the head of the product (Figure 17).
3. Finally, at the head, embed the flashing into the sealant on the mounting flange and fasten into place. The flashing paper should be cut sufficiently long enough to extend past the flashing paper at each jamb by at least 3 in (Figure 18).
4. Weather resistant building paper should be applied in a weatherboard fashion to complete the installation (Figure 19).

Note: Where weather resistant building paper, insulating board, or other materials by other trades may constitute the primary weather barrier behind the exterior wall finish (i.e. stucco, masonry, siding, etc.), the owner / General Contractor are responsible to ensure that the weather barrier is continuous by effectively sealing the material to the product frame.

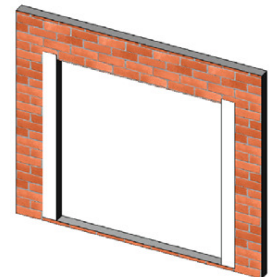


Figure 17:
Jamb flashing

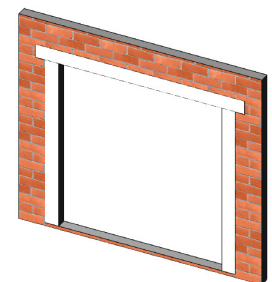


Figure 18:
Head Flashing

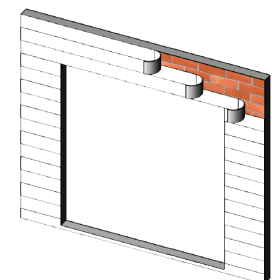


Figure 19:
Building Flashing

Appendix A: Joining Sillpans

Follow the instructions below for joining multiple piece Sillpans. Multiple piece Sillpans are required on products with net frame widths greater than 14 feet (168 inches) and corner units.

1. Install Sillpans per product installation instructions. *Caution: Apply a compatible sealant to the underside of the sillpan at the seam joint.*
2. Cut a piece of adhesive backed waterproof material to fit the joint as specified in drawing below, $A = 3/8"$. *Caution: Select waterproofing material that is compatible for your application. Waterproofing material must have an adhesive backing and be capable of withstanding the temperature ranges for your region.*
3. Remove excess sealant at joint on top of the sillpan that may have migrated in during installation.
4. Remove the adhesive backing from the waterproof material and apply to the sillpan. Waterproof material shall contain a fold on the interior water leg and attach to the sillpan as shown.

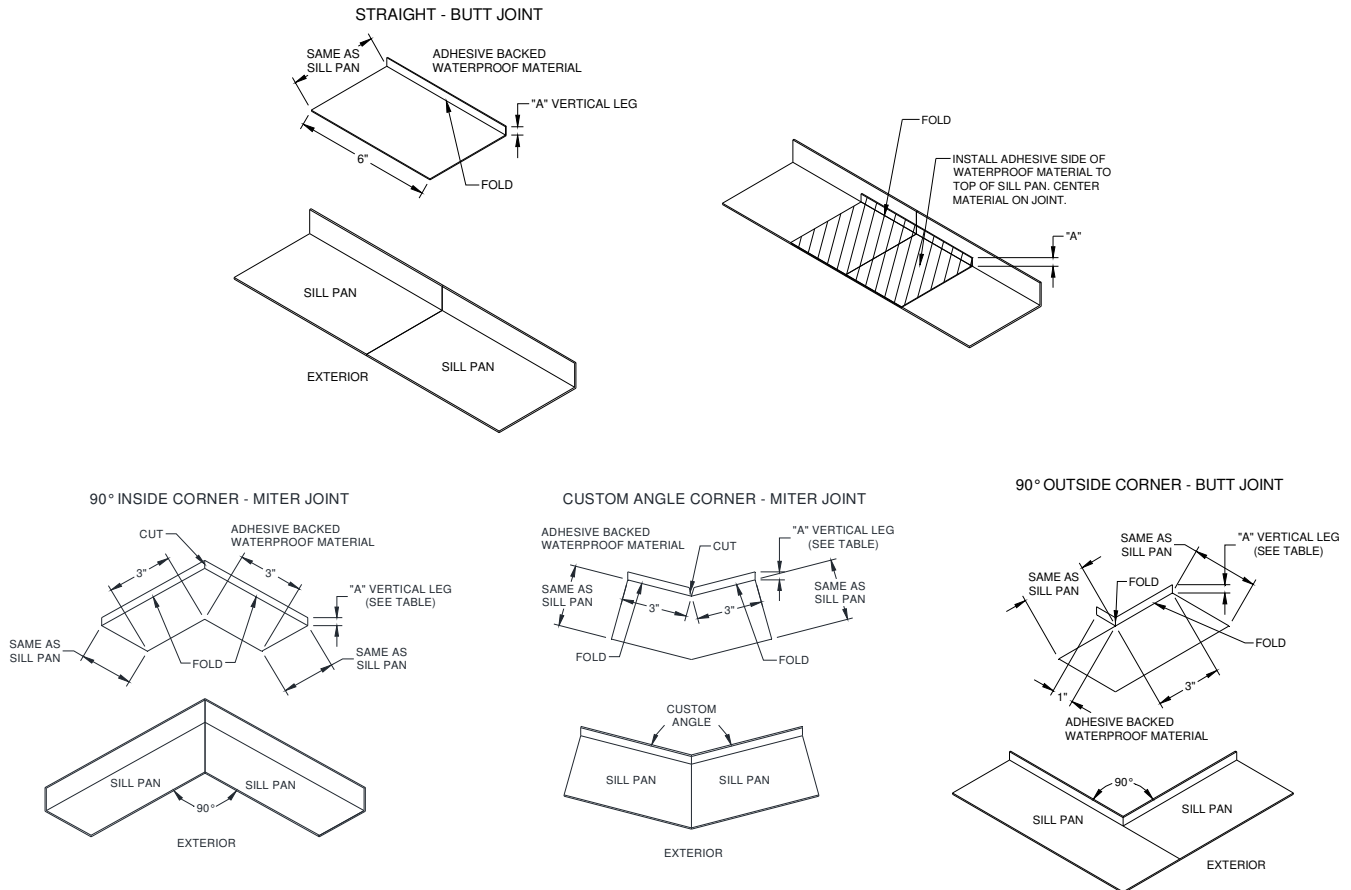


Figure A1:
Showing multiple piece sill-pans joining